

## How to fix the tape end?



Pict. 1: wall receiver ALZ 10

## DESCRIPTION

Necessary device to fix the tape end when using the ALLROUNDLINE wall mount unit or a single ALLROUNDLINE post. First drill the wall clip to the chosen place, then simply put the tape end on – that's all!

Plastic, black, fixation by screws

## TECHNISCHE DATEN

width	Ca. 15 mm
height	ca. 100 mm
depth	Ca. 7 mm
weight	ca. 0,01 kg
colour	black